

Valve Size	Required Actuator Range	Actuator Torque (Actual torque, no additional safety factor included)				Individual Part Order Code* (If ordered with the below order codes, Easytork will ship each part as standalone)				2017 List Price					Complete Actuator to Valve Order Code*	
		DA @ 60PSI	DA @ 80PSI	FS @ 60PSI	FS @ 80PSI	Actuator	Insert	Extended Shaft	Bracket	Actuator +	Insert +	Extended Shaft +	Bracket or Plate +	= Total Package: Actuator and hardware for mounting to valve		
1/4"	EVA-0309	146	195	95	127	C-A-1-11-1-111	D-111-0.342x0.342in									SH.12.1/4".0309.16
	EVA-0309	146	195	95	127	C-A-1-11-1-111	D-111-0.342x0.342in									SH.12.1/4".0309.16
3/8"	EVA-0309	146	195	95	127	C-A-1-11-1-111	D-111-0.342x0.342in									SH.12.3/8".0309.16
	EVA-0309	146	195	95	127	C-A-1-11-1-111	D-111-0.342x0.342in									SH.12.3/8".0309.16
1/2"	EVA-0309	146	195	95	127	C-A-1-11-1-111	D-111-0.342x0.342in									SH.12.1/2".0309.16
	EVA-0309	146	195	95	127	C-A-1-11-1-111	D-111-0.342x0.342in									SH.12.1/2".0309.16
3/4"	EVA-0309	146	195	95	127	C-A-1-11-1-111	D-111-0.342x0.342in									SH.12.3/4".0309.16
	EVA-0411	288	384	187	250	C-A-2-11-1-111	D-211-0.342x0.342in									SH.12.3/4".0411.16
1"	EVA-0309	146	195	95	127	C-A-1-11-1-111	D-111-0.342x0.342in									SH.12.1".0309.16
	EVA-0411	288	384	187	250	C-A-2-11-1-111	D-211-0.342x0.342in									SH.12.1".0411.16
1 1/4"	EVA-0411	288	384	187	250	C-A-2-11-1-111	D-211-0.429x0.429in									SH.12.1 1/4".0411.16
	EVA-0514	572	763	372	496	C-A-3-11-1-111	D-311-0.429x0.429in									SH.12.1 1/4".0514.16
1 1/2"	EVA-0411	288	384	187	250	C-A-2-11-1-111	D-211-0.429x0.429in									SH.12.1 1/2".0411.16
	EVA-0514	572	763	372	496	C-A-3-11-1-111	D-311-0.429x0.429in									SH.12.1 1/2".0514.16
2"	EVA-0411	288	384	187	250	C-A-2-11-1-111	D-211-0.429x0.429in									SH.12.2".0411.16
	EVA-0514	572	763	372	496	C-A-3-11-1-111	D-311-0.429x0.429in									SH.12.2".0514.16

Easytork will ship the actuator, insert, extended shaft, and bracket unassembled in one SKU box.

Refer to [Assembly & Labor](#) tab if buyer wants Easytork to assemble items together.

Disclaimer: Based on information available from valve manufacturer. All dimensions to be verified by customer prior to purchase confirmation.

Note*: Only for actuator and hardware required for mounting to valve. Order auxiliary add-ons (e.g., solenoid valve, lockout & PST, limit switch, chemical resistant adder, etc.) separately. If buyer requires assembly of auxiliary add-ons and/or valve, labor will be charged separately.